



PUT AWAY THE TOWEL

1 in 5 consumers say they are unsatisfied with the drying performance of their dishwasher.* And 63% of those consumers dry their dishes with a towel after their dishwasher has run.

The Advanced ProDry™ System helps remove warm, humid air from the dishwasher to deliver exceptional drying performance that helps make KitchenAid the Best Performing Dishwasher Brand without rinse aid.**



* Based on independent consumer research (2013).

** Combined wash and dry results of leading premium brands.

KitchenAid®

HOW THE ADVANCED PRODRY™ SYSTEM MAKES A DIFFERENCE

A system of vents and a fan on the side of the tub cools and mixes the air before it exits the dishwasher, so it will not damage surrounding flooring or cabinetry.

- 1 A 785-watt, recessed heating element pulses on and off to heat the air to help ensure proper drying.
- 2 Humid air is siphoned out of the dishwasher through a side duct.
- 3 Any condensation from the evaporating steam is collected and drained back into the dishwasher.
- 4 The humid air mixes with, and is cooled by, dry room air before being vented out from beneath the dishwasher.

KITCHENAID® DISHWASHERS WITH THE ADVANCED PRODRY™ SYSTEM

KDTM354E	KDTM384E	KDTM404E	KDTM504E	KDTM704E	KDTM804E
Advanced ProDry™ System	Advanced ProDry™ System	Advanced ProDry™ System	Advanced ProDry™ System	Advanced ProDry™ System	Advanced ProDry™ System
Clean Water Wash System	Clean Water Wash System	Clean Water Wash System	Clean Water Wash System	Clean Water Wash System	Clean Water Wash System
4 Pressure-Optimizing Wash Arms	4 Pressure-Optimizing Wash Arms	Dynamic Wash Arm	Dynamic Wash Arm	Dynamic Wash Arm	Dynamic Wash Arm
ProScrub® Option	ProScrub® Option	ProScrub® Option	ProScrub® Option	ProScrub® Option	ProScrub® Option
—	—	ProScrub® Upper Option	ProScrub® Upper Option	Bottle Wash Option	Bottle Wash Option
—	Window	—	—	—	Window