



WTW5015L

Whirlpool® 4.5 Cu. Ft. Top Load Agitator Washer with Built-In Faucet

Dimensions: h: 42 1/4" w: 27 3/4" d: 27"

Available in

TOP FEATURES



BUILT-IN WATER FAUCET

Prewash clothes in the washer with a built-in faucet.



DEEP WATER WASH OPTION

Get more water to help break down loose soils. This option fills your washer to the maximum water level so heavily soiled clothes get an optimal clean.

Bulky Items cycle defaults to maximum water level.



360 WASH AGITATOR

Multiple wash motions gently move clothes up, down and side to side throughout the cycle, helping to loosen soils and provide a thorough clean in different water levels.

EXTRAS



QUALIFYING QUESTION

How often do you prewash clothes before you put them in the washer?



DID YOU KNOW?

Easily prewash clothes and other items right in the washer with a conveniently located interior faucet that gives you easy access to an instant water stream to remove loose soils.



DEMO

Point out the built-in faucet and the on/off button. Explain to customers that this faucet is great for pre-washing clothes right in the washer instead of using a sink.

ADDITIONAL PRODUCTS TO CONSIDER

Be sure to tune into your customers' shopping priorities to bundle products across categories.

STEP UP

WTW8127LW

