

A woman with short dark hair, wearing a light orange long-sleeved shirt, is leaning over a kitchen counter. She is holding a white plate and appears to be preparing food. On the counter, there is a round metal baking pan, a small glass bowl with white cream, a small glass bowl with dark liquid, a blue spatula, and a smartphone. In the background, there is a modern kitchen with dark wood cabinets, a stainless steel oven, and a range hood. The text "Connecting Whirlpool SMART LCD Screen Appliance to Internet and Whirlpool® App Scan-to-Connect Method" is overlaid on the image in a bold, yellow font.

# Connecting Whirlpool SMART LCD Screen Appliance to Internet and Whirlpool® App Scan-to-Connect Method

# 1

ON THE MOBILE DEVICE

Open the  
Whirlpool® app


*TIP: Make sure your mobile device is on the same WiFi Network that your appliance will be!*



# 2

ON THE MOBILE DEVICE

Select  
**ADD APPLIANCE**

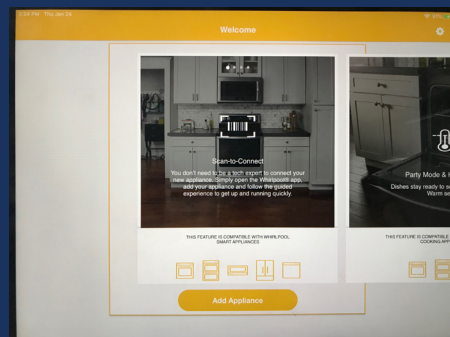


DO NOT DISTRIBUTE \* INTERNAL ONLY \* WHIRLPOOL CORPORATION CONFIDENTIAL\* SUBJECT TO CHANGE

# 3

ON THE MOBILE DEVICE

Scan the QR Code

*TIP: The QR Code can be found on the “Connect to Network” screen on the appliance (Tools>Wifi>Connect to Network), OR on the white, rectangular SAID and MAC label*

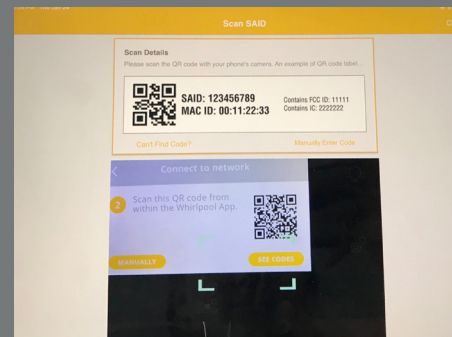


# 4

ON THE MOBILE DEVICE

Complete the instructions listed on the Whirlpool® app (as outlined in steps 5 - 12)

*TIP: Do NOT click next on the app until instructions are completed*

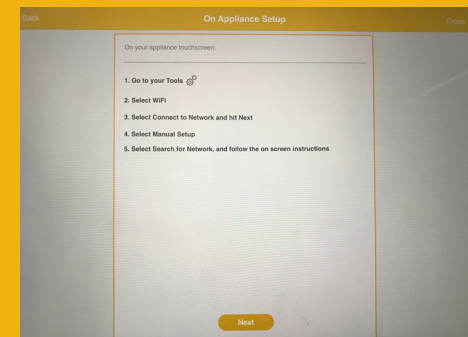

# 5

ON THE APPLIANCE


Go to **Tools**

***TIP:** Tools is the gear icon located on the bottom right handside, next to the LCD screen*

# 6

ON THE APPLIANCE


Select **Connect to Network**

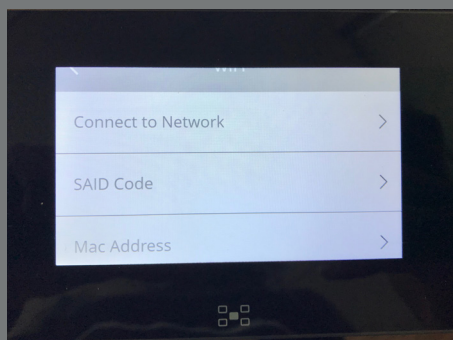

# 7

ON THE APPLIANCE

Select **Next** and then click **Manually**

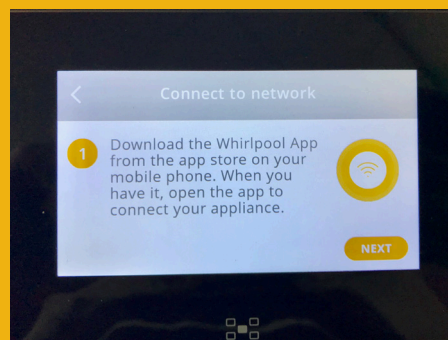


# 8

ON THE APPLIANCE

Select **Search for Network**, and follow the on LCD screen instructions

***TIP:** After you click, Search For Network above, you will see a yellow searching icon. Please give this screen 1-2 minutes to search for your network name*

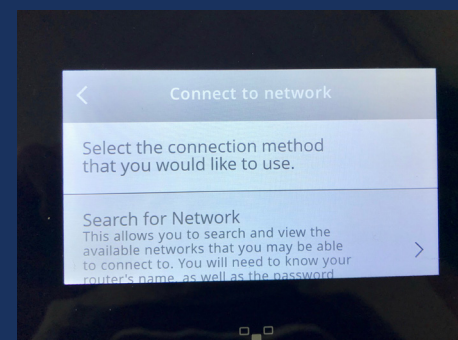




# 9

ON THE APPLIANCE


Select your WiFi Network

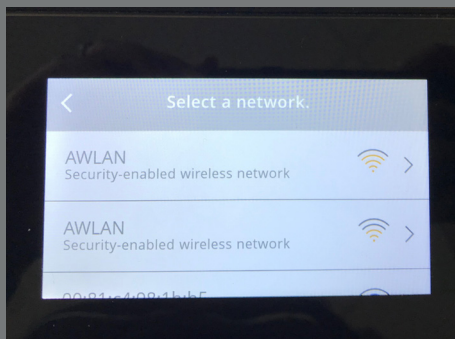

# 10

ON THE APPLIANCE

Enter your WiFi Network Password

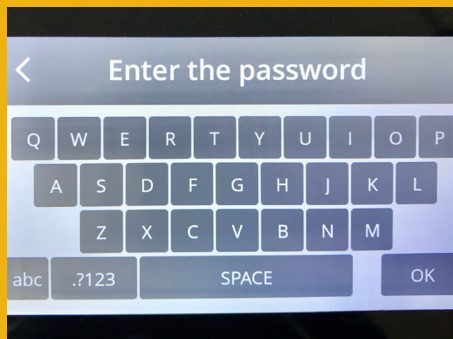


# 11

ON THE APPLIANCE

Wait for connection to be established between the mobile device and appliance

*TIP: This will connect the app to the appliance and could take up to two minutes. There will be a progress indicator on the app screen*

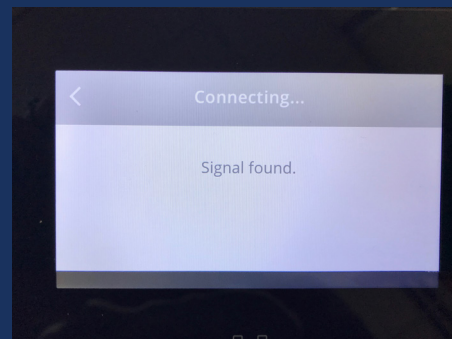

# 12

ON THE MOBILE DEVICE


You will be prompted once the sync was successful, click **Done**



# 13

## ON THE MOBILE DEVICE


Now the instructions are complete (from step 5), select **Next** on the Whirlpool® app

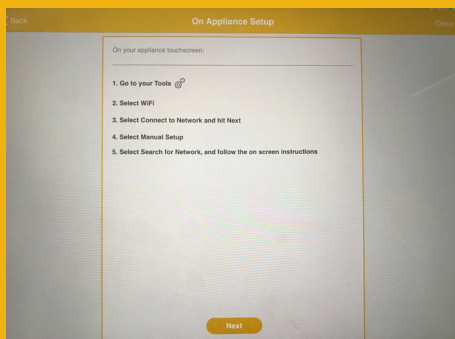

# 14

## ON THE MOBILE DEVICE

The Whirlpool® app will read **Connecting to Appliance**

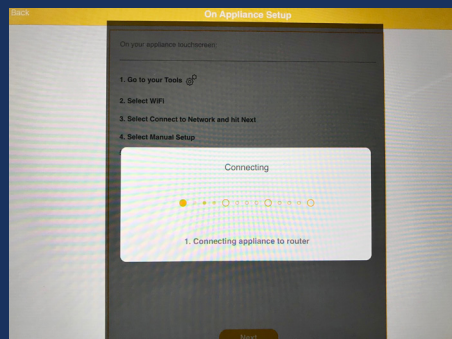


# 15

## ON THE MOBILE DEVICE

Once the app is done “Connecting to Appliance,” you have successfully connected the appliance to the internet

Upon successful pairing, register you appliance by entering an Appliance name and press **Finish**

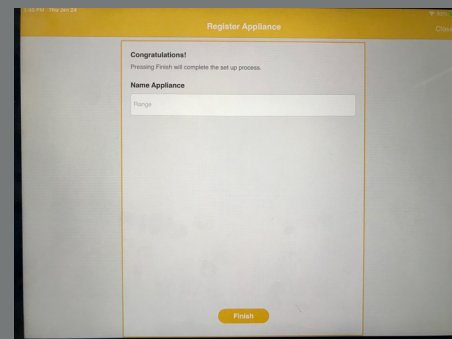

# 16

## ON THE MOBILE DEVICE

After claiming the appliance, the Whirlpool® app may prompt for an update

***TIP:** If a Software Update prompt is indicated, accept the update (it will take 30 - 40 minutes to download). While the download is in progress there will be a status bar on the appliance screen. After the update is completed, the LCD screen will cycle on and off (one or two times) at this point the update is complete and you will receive a notification on the Whirlpool® app*