

Ignite Your Showroom Floor

Power Up Cooking Products for Instant Impact

Dark Screens Don't Sell

An active display is an invitation to buy. **Activate Demo Mode to transform metal boxes into hands-on experiences.**



Stop Traffic

Draw shopper attention with powered on displays.



Invite Touch

Let customers explore the interface with zero heat.



Close Deals

Interactive displays build buying confidence.

Goal: 100% Powered Displays

If it looks ready to cook, it looks ready to buy!

Connect the 110V/120V power cord and bring floor models to life!

Directory

Cooking Showroom Activation Guide

WALL OVENS

DEMO CODE & POWER INSTRUCTIONS

- ⚡ [110V/120V HOOK UP](#)
- > [KITCHENAID®](#)
- > [WHIRLPOOL®](#)
- > [MAYTAG®](#)

MICROWAVE / MHC

DEMO CODE & POWER INSTRUCTIONS

- > [KITCHENAID®](#)
- > [WHIRLPOOL®](#)
- > [MAYTAG®](#)

FREQUENTLY ASKED QUESTIONS

Select a section above to begin setup OR
CTRL + F to search demo instructions by model number

Built-in Wall Ovens

Cooking Showroom Activation Guide



Nomenclature Reminder

K

Brand

W Whirlpool
K KitchenAid
M Maytag
A Amana

O

Platform

F Freestanding
S Slide-In Range
O Wall Oven
W Warming

E

Fuel Type

C Coil
E Other Electric
I Induction
G Gas
D Dual Fuel

S

Attributes

C Combo Oven
S Single Oven
D Double Oven
F Flexible Div.

Wall Ovens - 110V Hook Up

Step-by-Step Instructions for Showroom Demo Mode

TOOLS NEEDED

Phillips Head Screwdriver, Pliers & ½" Wrench


Step 1

Install 110v Built In Cord Form# WC170125-Kit.



[Watch Video](#)

Scan for Video

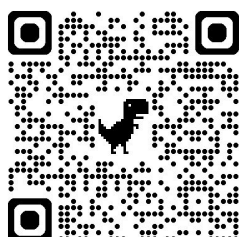

[View Written](#)

Click Link above for access to PDF

Step 2

Plug into power & put in demo mode.

Refer to individual model instructions for demo mode steps (e.g., Slide 7)



Need 110V Wall Oven Power Cord? Form# WC170125-Kit is now orderable on the e-store.

Internal Whirlpool users: scan QR code to sign-in to the e-store.

Dealers: contact your rep to order 110V power cords.



KitchenAid® Wall Ovens

Step-by-Step Instructions for Showroom Demo Mode

1

Select **Settings** on the control panel

2

Hidden menu options will scroll on the display

Press 0 to select **Demo Mode**.

To exit, select **Settings** and **Press 0**.



Applicable for all models with button control panel

MODELS

KOES530S

KOED530S

KOEC530S



KitchenAid® Wall Ovens

Step-by-Step Instructions for Showroom Demo Mode

CRITICAL FOR 110V SHOWROOMS: Demo Mode must be entered immediately after powering on for the first time to avoid error codes (F9 or F1E1).

1

Use the **LEFT Knob** or swipe down to navigate to **Menu > Settings**.

2

Scroll to **Info** and select **Demo Mode**.

3

Select **Continue**.

4



Enter Passcode **2 - 3 - 4 - 5**, then select **Next**.

5

Explore Product / See Videos

To exit, the passcode must be entered again.

Applicable for all models with knobs and touchscreen

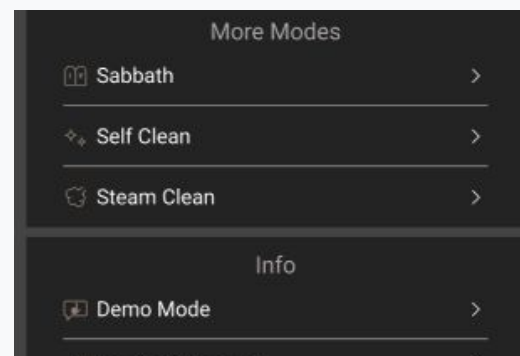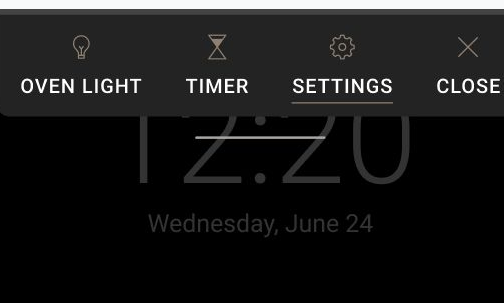

MODELS

KOES730S	KOEC727S
KOED730S	KOES930S
KOEC730S	KOED930S
KOES727S	KOEC930S
KOED727S	

EXIT DEMO

KitchenAid®

SEE VIDEOS

EXPLORE PRODUCT

CHOOSE: Looping Feature Content OR Full Product Navigation

WHIRLPOOL® Wall Ovens

Step-by-Step Instructions for Showroom Demo Mode

1

Select the **Tools** keypad.

2

Scroll and select **Info**.

3

Select **Store Demo Mode** and Select **ON**


Note: The display screen will show the time (default screen/standby mode).

4

Select the **Tools** keypad.

5

Select the **Try the Product** or **View Product Videos**

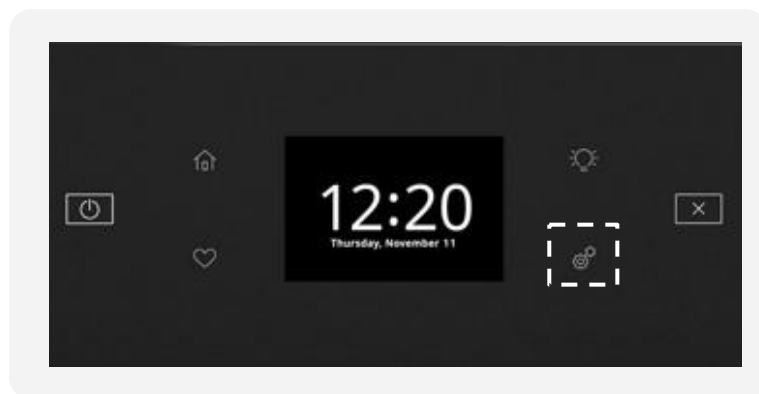

MODELS

WOES7030	WOES5030
WOED7030	WOED5030
WOEC7030	WOEC5030
WOES7027	WOES5027
WOED7027	WOED5027
WOEC7027	WOEC5027

TO EXIT DEMO MODE:

1. Select TRY THE PRODUCT > 2. Scroll and select EXPLORE > 3. Select Tools keypad > 4. Scroll and Select INFO > 5. Select STORE DEMO MODE and Select OFF > 6. Select YES.

WHIRLPOOL® Wall Ovens

Step-by-Step Instructions for Showroom Demo Mode

1

Select **Settings/Clock** on the control panel until **Demo Mode** is displayed

2

Press **1** to toggle **Demo Mode** on/off. The current setting will be displayed.

Press **X/Cancel** to exit Settings and display time.



MODELS

WOES3030
WOES3130
WOES3027

WOED3030
WOED3027
WOEC3030
WOEC3027



MAYTAG® Wall Ovens

Step-by-Step Instructions for Showroom Demo Mode

1

Select **Settings** on the control panel until **Demo Mode** is displayed

2

Press **1** to toggle **Demo Mode** on/off. The current setting will be displayed.

Press **X/Cancel** to exit Settings and display time.



Applicable for all models with button control panel

MODELS

MOES4030

MOED4030

MOEC4030

MOES6030

MOED6030

MOEC6030



Microwaves / MHCs



Cooking Showroom Activation Guide



Nomenclature Reminder

W

Brand

W Whirlpool
K KitchenAid
M Maytag
A Amana

F

Platform

M Microwave

M

Configuration

C Countertop
M Microwave Hood
Combination
B Built-in

S

Attributes

C Combo Oven
L Low Profile
F Flush
S Standard (MHC &
CTO)
D Drawer
T Texas Combo
Built-In

MAYTAG® Microwave

Step-by-Step Instructions for Showroom Demo Mode


1 **Touch** and **hold** number keypad '3' for 3 seconds.

2 **Press** until a confirmation tone sounds and '**DEMO**' lights up in display.



MODELS

MMS4230P*

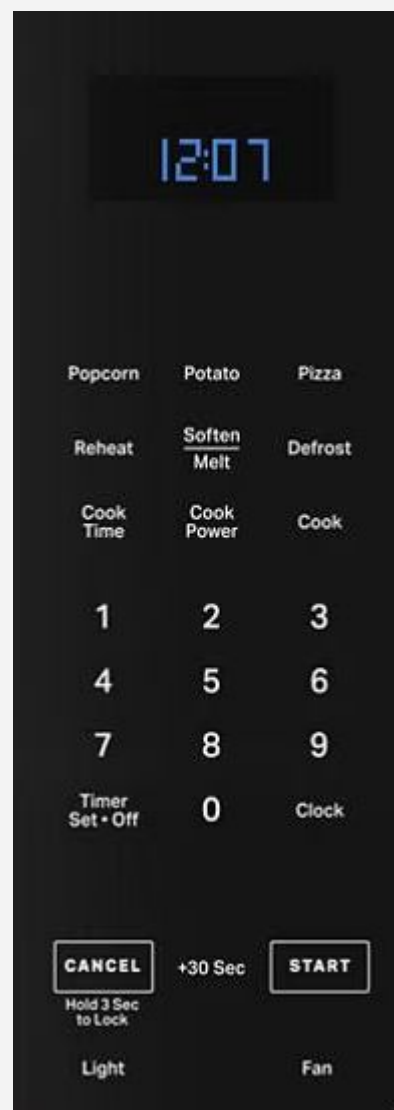

MAYTAG® Microwave

Step-by-Step Instructions for Showroom Demo Mode

1

Press **Settings** repeatedly to reach Demo Mode submenu.
"DEMO Press 1 -Enable"
 scrolling on the display.

2

Press **1** to activate **Demo Mode**.
 The current setting will be displayed.
 Press 'settings' button to save.



MODELS

MMM6030P*



MAYTAG® Microwave


Step-by-Step Instructions for Showroom Demo Mode

1

Select Settings, toggle to Info and select Demo Mode. You can turn it on/off from here

2

The demo mode enter code is 1234. Select Start to save the setting.

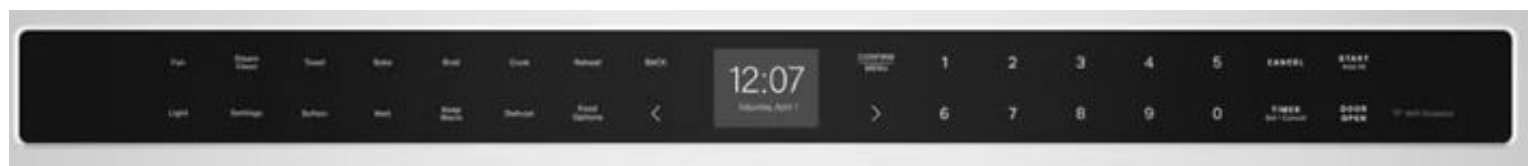

MODELS

MMM8030P*



WHIRLPOOL® Microwaves

Step-by-Step Instructions for Showroom Demo Mode

1

Press **Settings** repeatedly to reach Demo Mode submenu. **"DEMO Press 1 -Enable"** scrolling on the display.

2

Press **1** to activate **Demo Mode**. The current setting will be displayed.

Press "Use Settings to exit" to exit the display.



MODELS

WMMF5930P*
WMMF7530R*
WMMF7330R*



WHIRLPOOL® Microwaves

Step-by-Step Instructions for Showroom Demo Mode

1

Open **door**, press and hold number keypad '3' for 5 seconds.

2

Press the start button within 5 seconds to turn **Demo Mode** on. 'dOn_' icon lights up in the display.



MODELS

WML35011K*
WML55011H*



WHIRLPOOL® Microwaves

Step-by-Step Instructions for Showroom Demo Mode

1

Touch and **hold** number keypad '3' for 3 seconds.


2

Press until a confirmation tone sounds and '**DEMO**' icon lights up in display.



MODELS

WMH31017H*
WMMS3130R*
WMMS3230S*

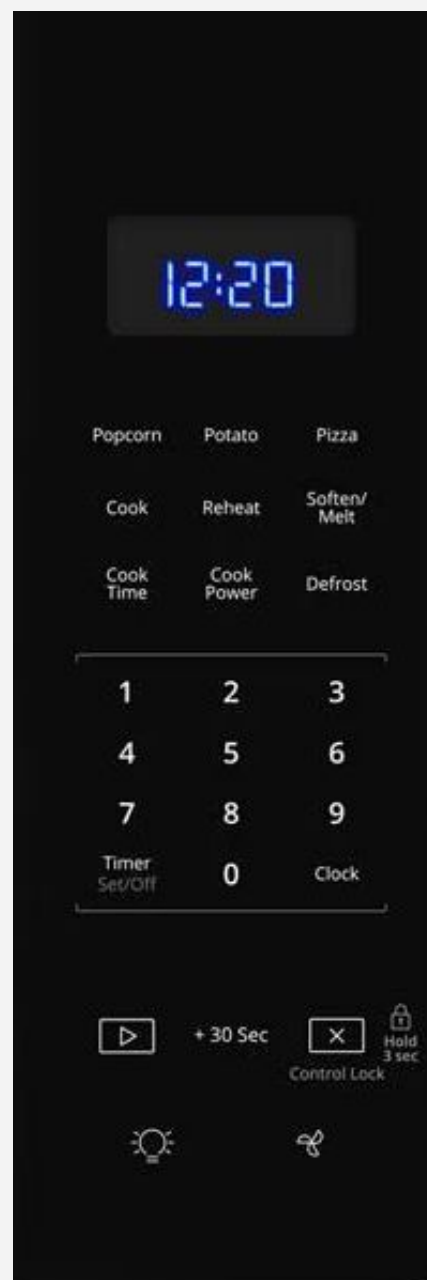

WHIRLPOOL® Microwaves

Step-by-Step Instructions for Showroom Demo Mode

1

Touch 'OPTIONS/CLOCK' to reach Demo Mode sub menu.


2

Follow the prompts to activate. The **Demo** icon will light up in the display.



MODELS

WMH32519H*

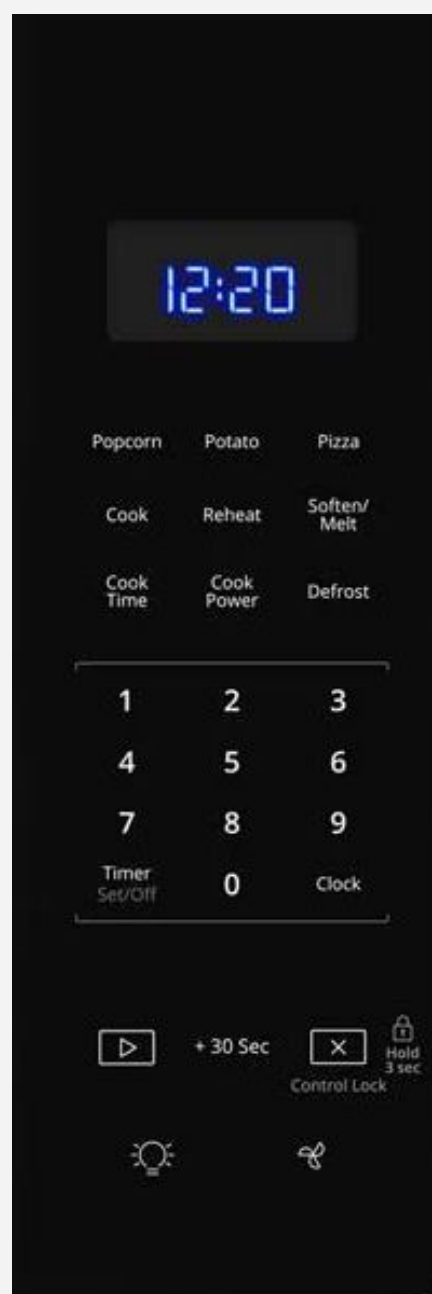

WHIRLPOOL® Microwaves

Step-by-Step Instructions for Showroom Demo Mode

1

Press 'settings' repeatedly until Demo Mode sub menu.


2

Press number '1'. Press 'settings' button again to activate Demo Mode.



MODELS

WMMS3330R*

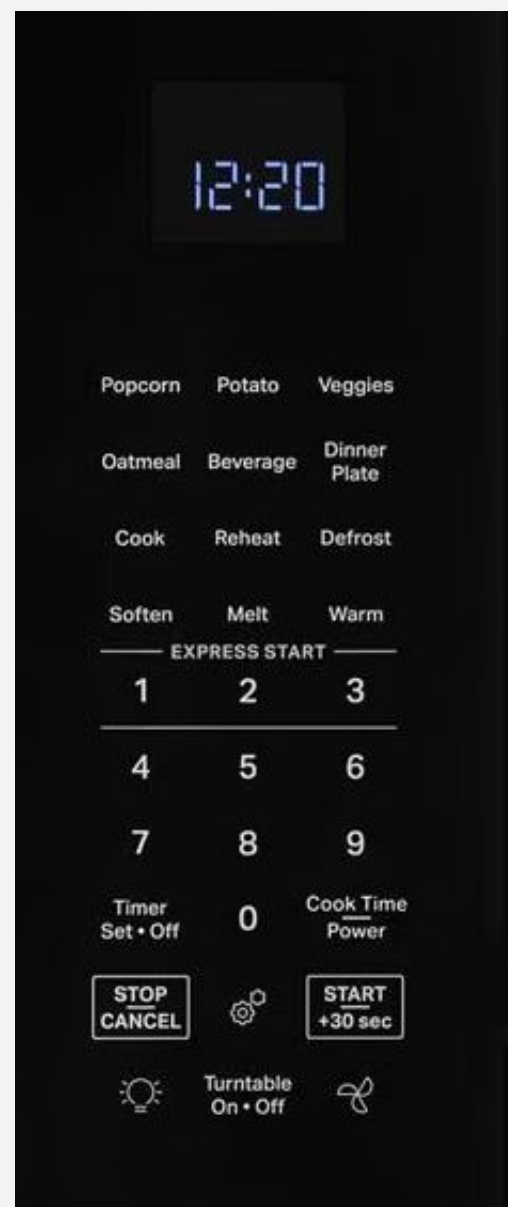

KitchenAid® Microwaves

Step-by-Step Instructions for Showroom Demo Mode

1

Press **Settings** repeatedly to reach Demo Mode submenu.
"DEMO Press 1 -Enable"
scrolling on the display.

2


Press 1 to activate **Demo Mode**.
The current setting will be displayed.

Press "Use Settings to exit" to exit the display.



MODELS

KMMF330P*

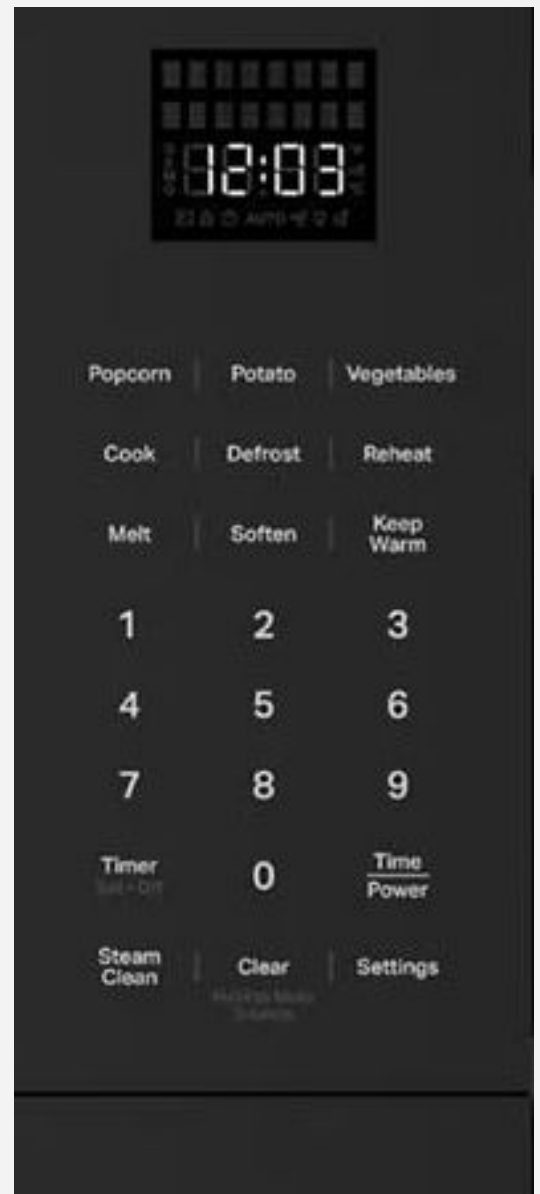

KitchenAid® Microwaves


Step-by-Step Instructions for Showroom Demo Mode

1

Select Settings, toggle to Info and select Demo Mode. You can turn it on/off from here.

2

The demo mode enter code is 1234.

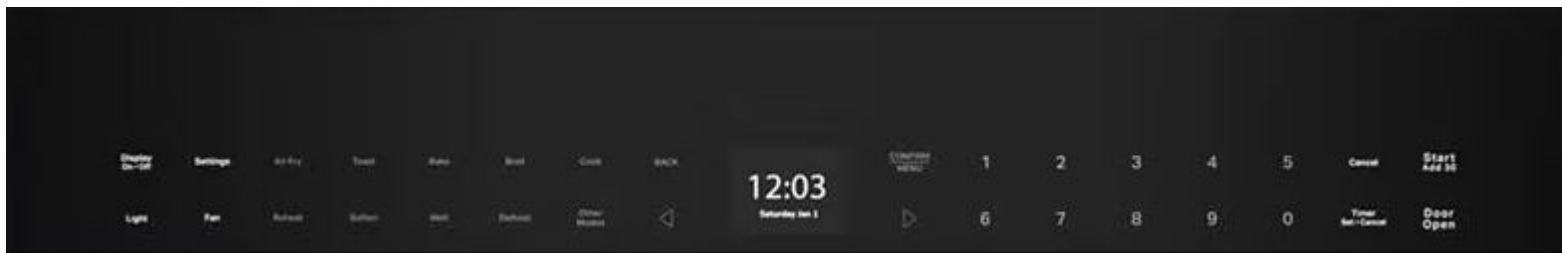

MODELS

KMMF730P*
KMMF530P*



KitchenAid® Microwaves

Step-by-Step Instructions for Showroom Demo Mode


1

Select Settings, toggle to Info and select Demo Mode. You can turn it on/off from here.




2

The demo mode enter code is 1234.

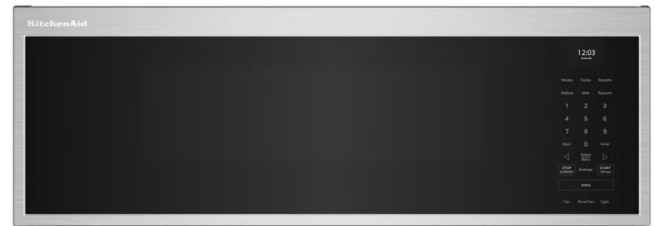

MODELS

KMMF730P*
KMMF530P*
KMML550R*

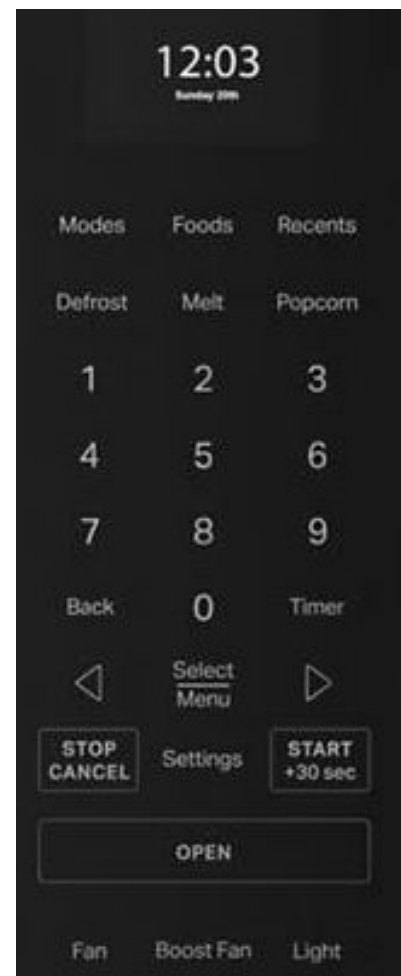

What's the difference between 110V and 120V?

In the US and Canada, 110V and 120V refer to the **exact same standard household electrical system**. Modern homes are wired for 120V, but "110V" is frequently used out of old habit.

Do any of the elements turn on when plugged in with a 110V/120V cord?

When the product is in demo mode, **NONE** of the elements (including the warming zone on ranges) turn on. If the range is **NOT** in demo mode but plugged in with a 110V/120V cord, the oven light, cooling fan, convection element & fan (select models) and the warming zone on the cooktop **WILL TURN ON**. It is **IMPERATIVE** to keep all units in demo mode while on the sales floor.

Will the product still be in demo mode if the power turns off?

Yes, if power is cut to the sales floor, when it comes back on the product will remain in demo mode.

What to do if an end consumer buys a flooring unit with a 110V/120V cord attached or still in demo mode?

The end consumer must refer to the User Guide to remove the 110V cord and replace it with a standard 240V cord. The 110V/120V cord **MUST** be removed for normal operation. Follow Use & Care guide instructions to exit demo mode prior to calling CXC.

What if the appliance is hooked up to someone else's app?

Call the CXC at 1-800-874-4698 to register and re-assign the appliance to their family account or consult the Use and Care guide.

Important Notes:

- Any modifications to in-store power (extension cords/strips) must be approved by store management.
- CXC Assistance: 1-800-874-4698