

How to Set the Flexible Temperature Zone



Press Home button



Press Cooling Functions



Press Temperatures



Press Flexible Temperature Zone

