

JENNAIR TRAINING PLAYBOOK

Product Showroom Modes (Updated Sept. '25)

<i>Product</i>	<i>Code/Sequence</i>
Smart Induction Cooktops	Within the first 60 seconds of a complete power reset, press and hold control lock for 6 seconds (HMi display will change). use the arrow buttons until 'dE' is displayed and then toggle the on / off. to confirm the change, the power button needs to be pressed within 30 seconds.
Wine Columns	Code: 1134
Panel Ready Built In Bottom Mount Ref: JBBFL30NMX	Code: 1134
M63 Wall Ovens (2025)	Code: 1231
Columns Showroom Mode	Simultaneously press and hold the top and bottom zone icons for 3 seconds to activate or deactivate.
Bottom Mount/FDBM Built-In Ref	Simultaneously hold down the fridge and freezer buttons for 4 seconds.
Exterior Dispense SxS Showroom Mode	Press and hold "Cooling On/Off" and "Max Cool" for 3 seconds.
Non-Dispense SxS Showroom Mode	Toggle the "Cooling On/Off" button.
Exterior Dispense Counter Depth Showroom Mode	Press and hold "F/°C" and "Drawer" buttons at the same time for 3 seconds.
Interior Dispense Counter Depth Showroom Mode	Toggle the "Cooling On/Off" button.
Under Counter Showroom Mode	Hold down "Sabbath Mode" and "Cool On" buttons at the same time.
Wall Oven Showroom Mode (Previous Generation)	Access the Tools menu and select "Demo Mode" from the available options.
Microwave Drawer Showroom Mode	Touch "SETUP" five times, then touch and hold "START" for 3 seconds. To deactivate, touch "SETUP" five times, then touch "START".
Built-In Coffee Maker	Enter the menu, press the arrow keys until the display shows "DEMO MODE," then press the arrow to start. To exit, turn the coffee system off by pressing the power button.
Dishwashers	Hold down the "Normal" key for 5 seconds until the LEDs change, then keep holding "Normal" and press the "START" key 3 times. Repeat the same steps to exit.