



**Whirlpool®**

WED5620H

**7.4 CU. FT. FRONT LOAD ELECTRIC DRYER  
WITH INTUITIVE TOUCH CONTROLS**

Dimensions: h: 38.75" w: 27" d: 31"

Colors:  White



## START THE CONVERSATION

What items do you remove from the dryer before they're completely dry?

## TOP FEATURES



1

### ADVANCED MOISTURE SENSING

Advanced Moisture Sensing ends the cycle at the right time to help prevent damage caused by overdrying.



2

### INTUITIVE CONTROLS

Create customized cycles in a few touches with Intuitive Controls.



3

### SANITIZE CYCLE

Use higher temperatures to sanitize items like towels

## DID YOU KNOW?

Sometimes the wax from dryer sheets can build up on moisture sensors. Use a damp cloth to refresh the sensor to accurately assess moisture within the drum.

## HOW TO DEMONSTRATE



### ADVANCED MOISTURE SENSING

Open the dryer door and point out the moisture sensing strips located on the back of the lint screen holder. Explain how the strips, along with the inlet and outlet thermistors, complete the Advanced Moisture Sensing system, which adapts drying times to provide the right amount of dry.

## ADDITIONAL PRODUCTS TO CONSIDER

Be sure to tune into your customers' shopping priorities to bundle products across categories



ALSO AVAILABLE / STEP UP  
[WED6620H](#)



LAUNDRY / PAIR WITH  
[WFW5620H](#)