



Whirlpool®

WFGS2030R

**30-INCH GAS RANGE WITH CRISPY MODE
AND NO PREHEAT MODE**

Dimensions: h: 46.25" w: 29.875" d: 27.2"

Colors:  Stainless Steel



START THE CONVERSATION

Do you ever wish you could easily add an extra bit of crunch to things like pizza or fries, without having to pay extra for an air fry oven?

TOP FEATURES



1

CRISPY MODE

Dial up the crunch for an effortlessly easy crispy finish with Crispy Mode. Using high heat from both the top and bottom elements, add a crispy finish to your favorite recipes.



2

NO PREHEAT MODE

Take preheating off your plate and cook up frozen faves with No Preheat Mode. Simply press a few buttons and let your oven calculate the proper cooking time.



3

2 SPEEDHEAT™ BURNERS

Use the SpeedHeat™ Burner to boil 20% faster* with high heat, so you can get dinner to the table quickly. *Compared to 9.5K burner on the same model

DID YOU KNOW?

While Air Fry uses high-speed fans for maximum crispness, Crispy Mode is a great budget-friendly alternative. By firing top and bottom elements together, it gives everyday meals a fast, delicious crunch without the extra cost

HOW TO DEMONSTRATE



CRISPY MODE

Guide the customer to the control panel, have them touch "crispy mode". Tell them how standard baking only uses bottom heat. Crispy Mode engages both the top and bottom elements at maximum high heat at the same time. It surrounds the food with intense top-and-bottom heat to crisp up the edges much better than a standard bake cycle

ADDITIONAL PRODUCTS TO CONSIDER

Be sure to tune into your customers' shopping priorities to bundle products across categories



ALSO AVAILABLE / STEP UP
[WFGS3030R](#)



SUITE MATCH REFRIGERATOR
[WRSC5536R](#)



SUITE MATCH DISHWASHER
[WDF341PAP](#)