

Whirlpool

WSES3130S

30-INCH ELECTRIC RANGE WITH NO PREHEAT AND SLOW COOK MODES

Dimensions: h: 34.6" w: 29.9" d: 25.4" Colors:
Black Stainless Steel

White

START THE CONVERSATION

How much time would you save if you didn't have to preheat your oven?

TOP FEATURES

NO PREHEAT MODE

Take preheating off your plate and cook up frozen faves with No Preheat Mode. Simply press a few buttons and let your oven calculate the proper cooking time.



SLOW COOK

2

Heat up all day dishes with Slow Cook. Our high speed fan optimizes air flow to maintain a low, even temperature for longer cook times to thoroughly heat up your food. Tackle your to-do list while soups, pastas and roasts come to temp without the worry.



EDGE-TO-EDGE GLASS COOKTOP

Maximize your cook space with the exceptional style and flexibility of an Edge-to-Edge Cooktop. Move pots and pans between heating elements to sauté, boil and simmer with style.



DID YOU KNOW?

Imagine how much time No Preheat Mode could save on busy weeknights, letting you get dinner on the table faster with less hassle. It's all about making your evenings easier and freeing up your time for what matters most.

HOW TO DEMONSTRATE



NO PREHEAT MODE

Show your customer how easy mealtime can be. With No Preheat Mode, they can place a frozen meal right in the oven, press a few buttons, and the oven takes care of the rest—automatically calculating the cook time. It can save up to 10–15 minutes compared to traditional preheating, which adds up on busy nights.

ADDITIONAL PRODUCTS TO CONSIDER

Be sure to tune into your customers' shopping priorities to bundle products across categories



ALSO AVAILABLE / STEP UP WSES5030S



SUITE MATCH REFRIGERATOR WRS315SDH



SUITE MATCH DISHWASHER WDT531HAP

© 2025 Whirlpool. All rights reserved.