



Whirlpool®

WTW5025S

**4.5 CU. FT. TOP LOAD AGITATOR WASHER
WITH BUILT-IN FAUCET**

Dimensions: h: 41.5" w: 27.75" d: 27"

Colors: ☐ White



START THE CONVERSATION

How often do you prewash clothes before you put them in the washer?

TOP FEATURES



1

BUILT-IN WATER FAUCET

Easily prewash clothes and other items right in the washer with a conveniently located faucet that gives you easy access to an instant water stream to remove loose soils.



2

PRESOAK OPTION

Save a step by soaking and washing in one cycle. The Presoak Option starts washing your laundry after a 30 minute presoak.

3

QUICK WASH CYCLE

Your small, lightly soiled loads will be clean in as little as 30 minutes with the Quick Wash cycle.*

*Based on a 3-lb load"

DID YOU KNOW?

Easily prewash clothes and other items right in the washer with a conveniently located interior faucet that gives you easy access to an instant water stream to remove loose soils.

HOW TO DEMONSTRATE



BUILT-IN WATER FAUCET

Open the lid and show customers the water faucet and its on/off button. Explain that this feature allows for convenient pre-washing of clothes directly in the machine. Demonstrate how to activate the faucet by selecting the water faucet option on the cycle knob. Emphasize the benefit of spot treating and soaking clothes with cold water without needing to use a sink.

ADDITIONAL PRODUCTS TO CONSIDER

Be sure to tune into your customers' shopping priorities to bundle products across categories