



WHIRLPOOL® 7.4 CU. FT. ELECTRIC WRINKLE SHIELD DRYER WITH STEAM

Dimensions: h: 38 1/8" w: 27" d: 31"

Colors: Chrome Shadow White




WED6605M

START THE CONVERSATION

What items do you remove from the dryer before they're completely dry?

TOP FEATURES

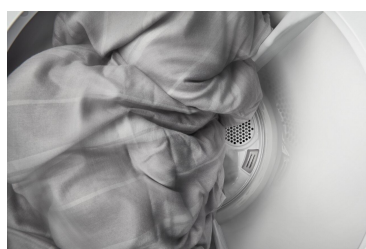

1

ADVANCED MOISTURE SENSING

Advanced Moisture Sensing ends the cycle at the right time to help prevent damage caused by overdrying.

2

STEAM REFRESH CYCLE

Release wrinkles without rewashing

3

SANITIZE CYCLE

Use higher temperatures to sanitize items like towels

DID YOU KNOW?

Sometimes the wax from dryer sheets can build up on moisture sensors. Use a damp cloth to refresh the sensor to accurately assess moisture within the drum.

HOW TO DEMONSTRATE



Advanced Moisture Sensing

Open the dryer door and point out the moisture sensing strips located on the back of the lint screen holder. Explain how the strips, along with the inlet and outlet thermistors, complete the Advanced Moisture Sensing system, which adapts drying times to provide the right amount of dry.

ADDITIONAL PRODUCTS TO CONSIDER

Be sure to tune into your customers' shipping priorities to bundle products across categories