



WHIRLPOOL® 4.5 CU. FT. TOP LOAD AGITATOR WASHER WITH BUILT-IN FAUCET

Dimensions: w: 27 3/4" d: 27"

Colors: White



WTW5015L

START THE CONVERSATION

How often do you prewash clothes before you put them in the washer?

TOP FEATURES



1

BUILT-IN WATER FAUCET

Prewash clothes in the washer with a built-in faucet.



2

DEEP WATER WASH OPTION

Get more water to help break down loose soils. This option fills your washer to the maximum water level so heavily soiled clothes get an optimal clean....

Bulky Items cycle defaults to maximum water level.



3

360 WASH AGITATOR

Multiple wash motions gently move clothes up, down and side to side throughout the cycle, helping to loosen soils and provide a thorough clean in different water levels.

DID YOU KNOW?

Easily prewash clothes and other items right in the washer with a conveniently located interior faucet that gives you easy access to an instant water stream to remove loose soils.

HOW TO DEMONSTRATE



Built-in water faucet

Point out the built-in faucet and the on/off button. Explain to customers that this faucet is great for pre-washing clothes right in the washer instead of using a sink.

ADDITIONAL PRODUCTS TO CONSIDER

Be sure to tune into your customers' shipping priorities to bundle products across categories



ALSO AVAILABLE / STEP UP
WTW8127L



WED560LH

